


Panel

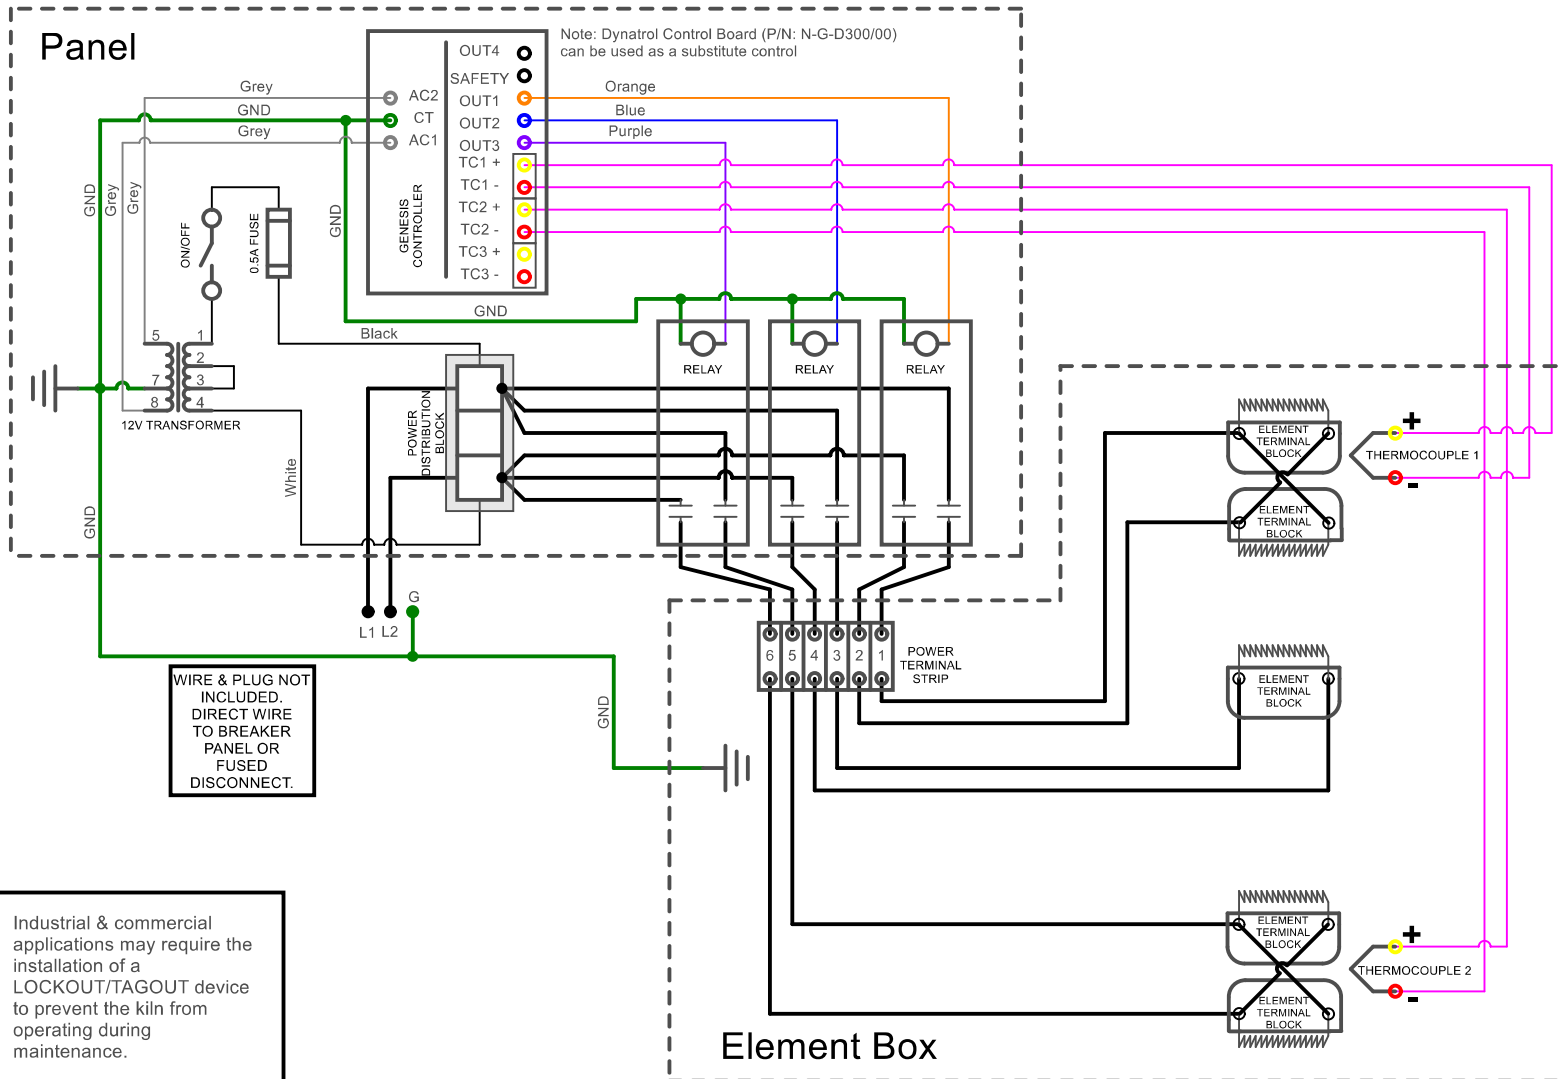

WIRE & PLUG NOT INCLUDED. DIRECT WIRE TO BREAKER PANEL OR FUSED DISCONNECT.

Industrial & commercial applications may require the installation of a LOCKOUT/TAGOUT device to prevent the kiln from operating during maintenance.

This kiln is recommended to be wired & connected to an approved U. L. & NEC configured receptacle controlled with a disconnect switch and properly fused according to the kW load specification listed on the kiln nameplate. L&L Kiln Mfg., Inc., also recommends fuses rather than circuit breakers to prevent nuisance tripping.

Wiring Information	
Power	10AWG / 150°C / 600V
Control	16-22AWG / 105°C / 600V
Power Supply Wire Gauge assumes 75°C Copper Wire. See hotkilns.com/wire-size.	

Model: e28M-220	
Voltage	220 / 1 / 50-60
Watts	10,560
Full Load Amps	L1 48.0 L2 48.0 L3
Power Supply	Fuse Wire
	60A 6AWG
Standard Elements: E-E-28ML/41	
Quad Elements: E-E-28MQ/41	
Quantity: 5	Ohms: 22.1

Element Box

E28M Easy-Fire 1 Phase 220V 220V



505 Sharptown Road
Swedesboro NJ 08085
service@hotkilns.com
(856)-294-0077

Drawn by: JS

Rev.	Date	Description	C0027
------	------	-------------	-------