



WIRE & PLUG NOT INCLUDED. DIRECT WIRE TO BREAKER PANEL OR FUSED DISCONNECT.

Wiring Information	
Power	10AWG / 150°C / 600V
Control	16-22AWG / 105°C / 600V
Power Supply Wire Gauge assumes 75°C Copper Wire. See hotkilns.com/wire-size.	

Model: e18S-220			
Voltage	220 / 1 / 50-60		
Watts	5,268		
Full Load Amps	L1	L2	L3
	23.9	23.9	
Power Supply	Fuse	Wire	
	30A	10AWG	
Elements E-E-18SL/41	QTY	OHMS	
	4	8.84	

Industrial & commercial applications may require the installation of a LOCKOUT/TAGOUT device to prevent the kiln from operating during maintenance.

This kiln is recommended to be wired & connected to an approved U. L. & NEC configured receptacle controlled with a disconnect switch and properly fused according to the kW load specification listed on the kiln nameplate. L&L Kiln Mfg., Inc., also recommends fuses rather than circuit breakers to prevent nuisance tripping.

E18S Easy-Fire 1 Phase 220V (C0007)					
				505 Sharptown Road Swedesboro NJ 08085 service@hotkilns.com (856)-294-0077	
A	05/12/2026		AF	Drawn by: AF	
Rev.	Date	Description	Approved by	Dwg. No. C0007	