


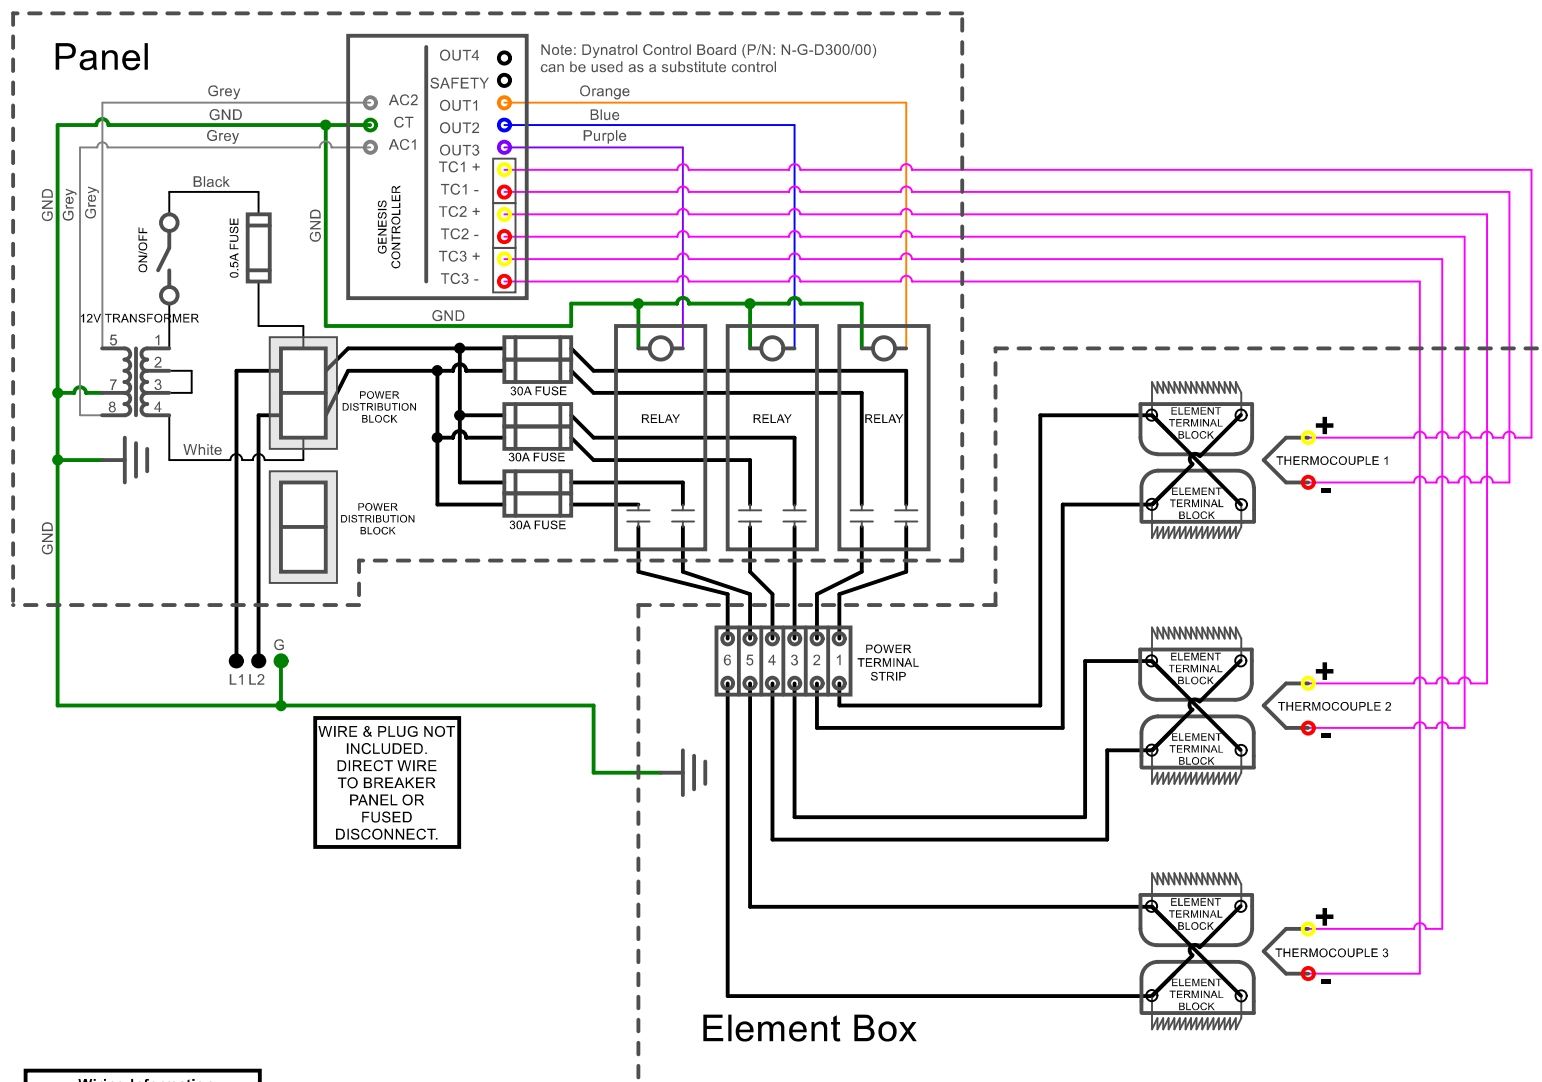

WIRE & PLUG NOT INCLUDED. DIRECT WIRE TO BREAKER PANEL OR FUSED DISCONNECT.

Industrial & commercial applications may require the installation of a LOCKOUT/TAGOUT device to prevent the kiln from operating during maintenance.

This kiln is recommended to be wired & connected to an approved U. L. & NEC configured receptacle controlled with a disconnect switch and properly fused according to the kW load specification listed on the kiln nameplate. L&L Kiln Mfg., Inc., also recommends fuses rather than circuit breakers to prevent nuisance tripping.

Wiring Information	
Power	10AWG / 150°C / 600V
Control	16AWG / 105°C / 600V
Power Supply Wire Gauge assumes 75°C Copper Wire. See hotkilns.com/wire-size.	

Model: eQ2827-208			
Voltage	208 / 1 / 50-60		
Watts	14,950		
Full Load Amps	L1	L2	L3
	71.9	71.9	
Power Supply	Fuse	Wire	
	90A	3AWG	
Elements	QTY	OHMS	
	E-Q-2827/20	6 16.7	

Model: eQ2827-220			
Voltage	220 / 1 / 50-60		
Watts	14,950		
Full Load Amps	L1	L2	L3
	68.0	68.0	
Power Supply	Fuse	Wire	
	90A	4AWG	
Elements	QTY	OHMS	
	E-Q-2827/40	6 18.7	

Model: eQ2827-240			
Voltage	240 / 1 / 50-60		
Watts	14,950		
Full Load Amps	L1	L2	L3
	62.3	62.3	
Power Supply	Fuse	Wire	
	80A	4AWG	
Elements	QTY	OHMS	
	E-Q-2827/30	6 22.3	

eQ2827 eQuad-Pro 1 Phase 208V, 220V, 240V			 505 Sharptown Road Swedesboro NJ 08085 service@hotkilns.com (856)-294-0077 Drawn by: JS
Rev.	Date	Description	
			C0089