


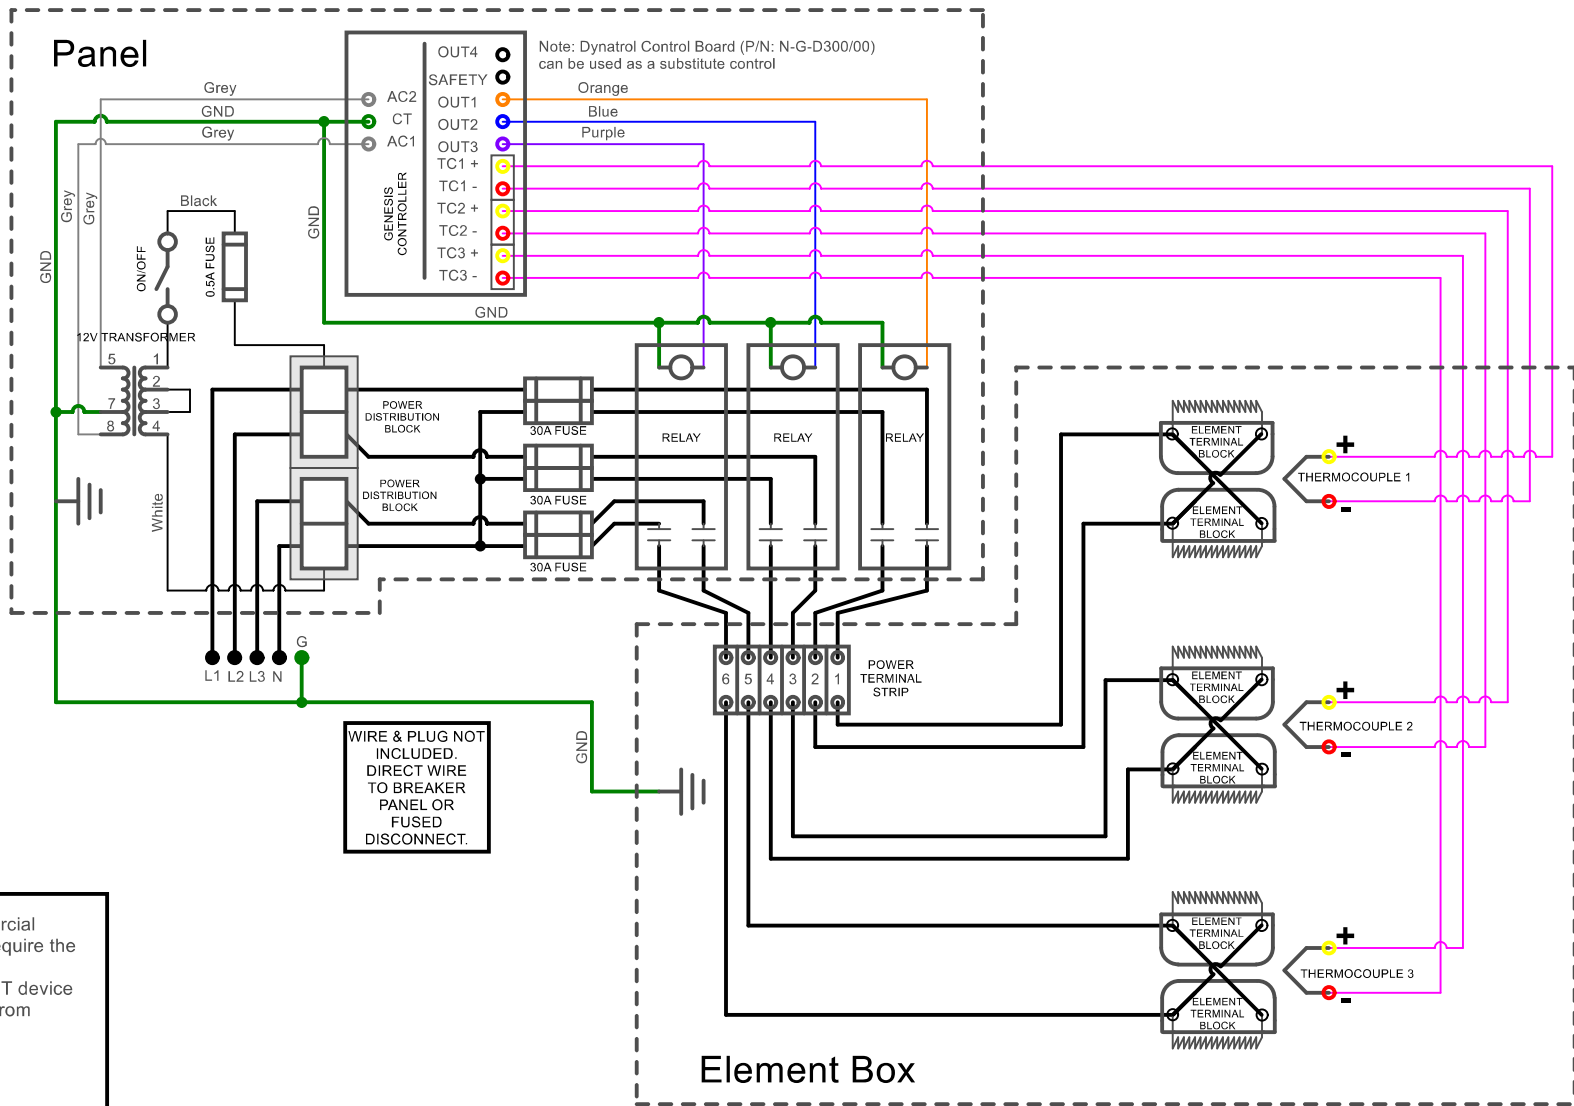

WIRE & PLUG NOT INCLUDED. DIRECT WIRE TO BREAKER PANEL OR FUSED DISCONNECT.

Industrial & commercial applications may require the installation of a LOCKOUT/TAGOUT device to prevent the kiln from operating during maintenance.

This kiln is recommended to be wired & connected to an approved U. L. & NEC configured receptacle controlled with a disconnect switch and properly fused according to the kW load specification listed on the kiln nameplate. L&L Kiln Mfg., Inc., also recommends fuses rather than circuit breakers to prevent nuisance tripping.

Wiring Information	
Power	10AWG / 150°C / 600V
Control	16AWG / 105°C / 600V
Power Supply Wire Gauge assumes 75°C Copper Wire. See hotkilns.com/wire-size.	

Model: eQ2827-380-3PY			
Voltage	380 / 3-Y / 50-60		
Watts	14,950		
Full Load Amps	L1	L2	L3
	22.7	22.7	22.7
Power Supply	Fuse	Wire	
	30A	10AWG	
Elements	QTY	OHMS	
E-Q-2827/40	6	18.7	

Model: eQ2827-400-3PY			
Voltage	400 / 3-Y / 50-60		
Watts	16,976		
Full Load Amps	L1	L2	L3
	24.6	24.6	24.6
Power Supply	Fuse	Wire	
	40A	10AWG	
Elements	QTY	OHMS	
E-Q-2827/40	6	18.7	

Model: eQ2827-415-3PY			
Voltage	415 / 3-Y / 50-60		
Watts	14,950		
Full Load Amps	L1	L2	L3
	20.8	20.8	20.8
Power Supply	Fuse	Wire	
	30A	10AWG	
Elements	QTY	OHMS	
E-Q-2827/30	6	22.3	

eQ2827 eQuad-Pro 3 Phase Wye
380V, 400V, 415V



505 Sharptown Road
Swedesboro NJ 08085
service@hotkilns.com
(856)-294-0077

Drawn by: JS

Rev. Date Description C0090