


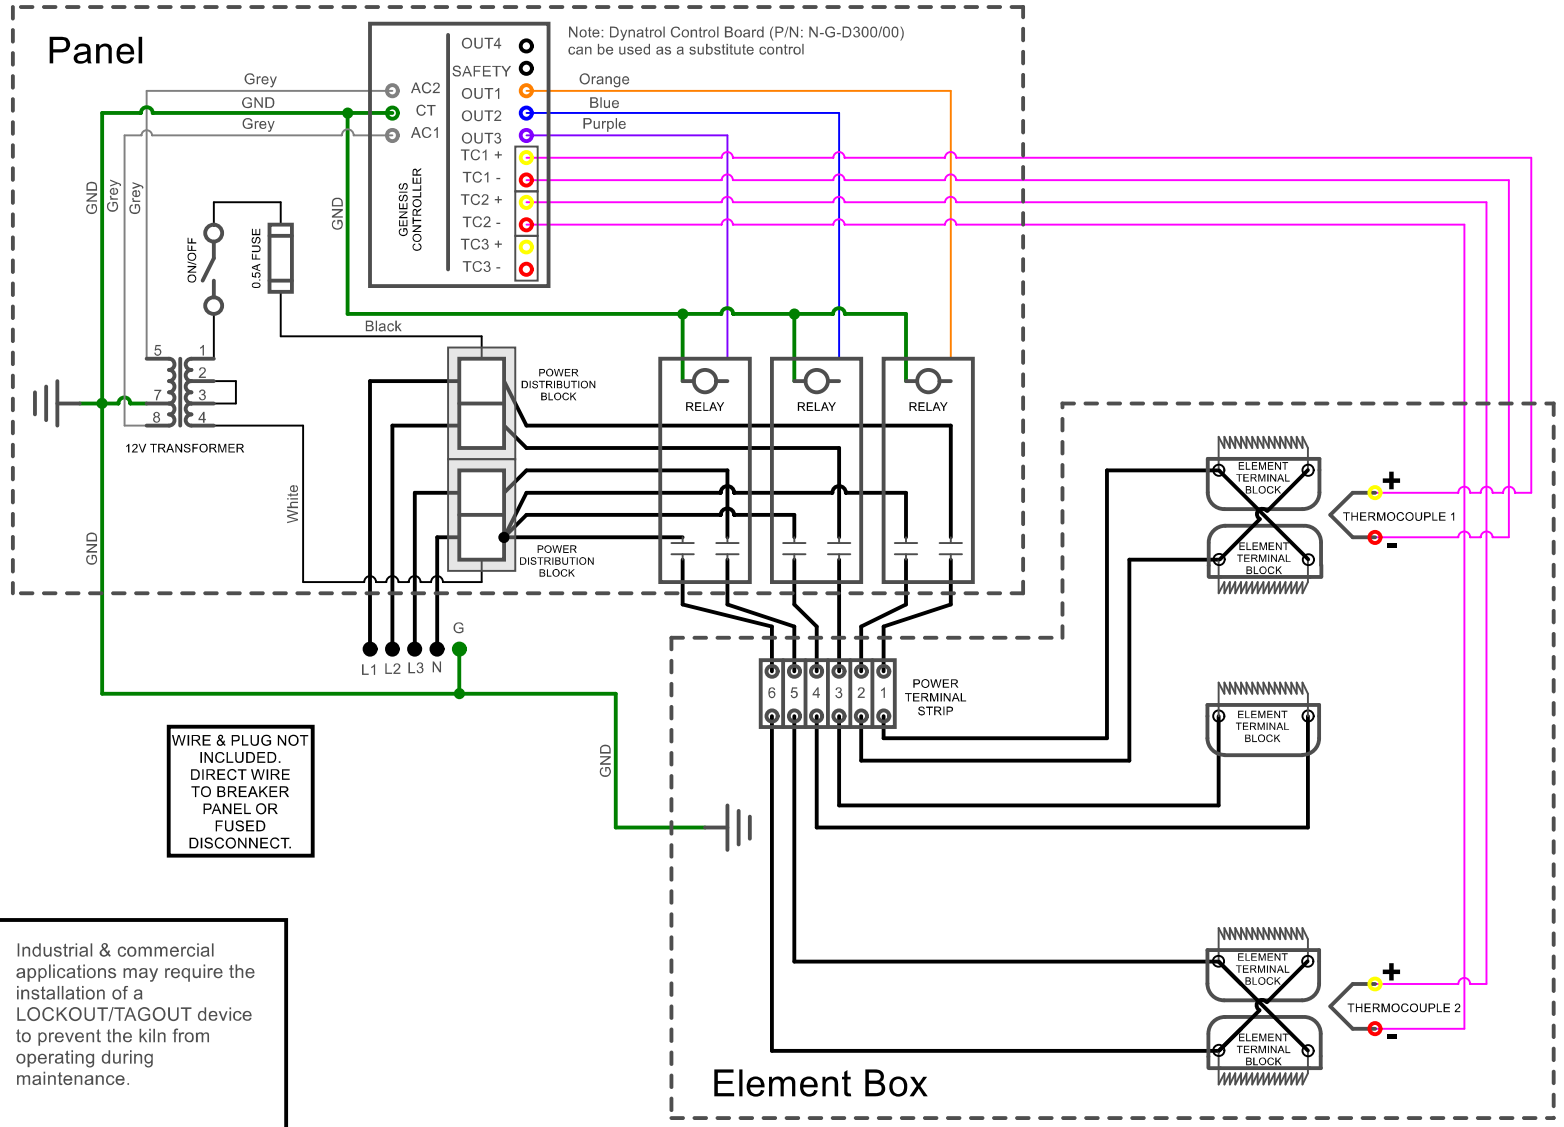

WIRE & PLUG NOT INCLUDED. DIRECT WIRE TO BREAKER PANEL OR FUSED DISCONNECT.

Industrial & commercial applications may require the installation of a LOCKOUT/TAGOUT device to prevent the kiln from operating during maintenance.

This kiln is recommended to be wired & connected to an approved U. L. & NEC configured receptacle controlled with a disconnect switch and properly fused according to the kW load specification listed on the kiln nameplate. L&L Kiln Mfg., Inc., also recommends fuses rather than circuit breakers to prevent nuisance tripping.

Wiring Information	
Power	10AWG / 150°C / 600V
Control	16-22AWG / 105°C / 600V
Power Supply Wire Gauge assumes 75°C Copper Wire. See hotkilns.com/wire-size.	

Model: e18M-380-3PY	
Voltage	380 / 3-Y / 50-60
Watts	8,000
Full Load Amps	L1 14.5 L2 14.5 L3 7.3
Power Supply	Fuse 20A Wire 14AWG
Elements	QTY 5 OHMS 29.11

Model: e18M-400-3PY	
Voltage	400 / 3-Y / 50-60
Watts	9,085
Full Load Amps	L1 15.8 L2 15.8 L3 7.9
Power Supply	Fuse 20A Wire 14AWG
Elements	QTY 5 OHMS 29.11

Model: e18M-415-3PY	
Voltage	415 / 3-Y / 50-60
Watts	8,000
Full Load Amps	L1 13.3 L2 13.3 L3 6.7
Power Supply	Fuse 20A Wire 14AWG
Elements	QTY 5 OHMS 34.65

E18M Easy-Fire 3 Phase Wye 380V, 400V, 415V			 505 Sharptown Road Swedesboro NJ 08085 service@hotkilns.com (856)-294-0077 Drawn by: JS
Rev.	Date	Description	
			C0005