


Panel

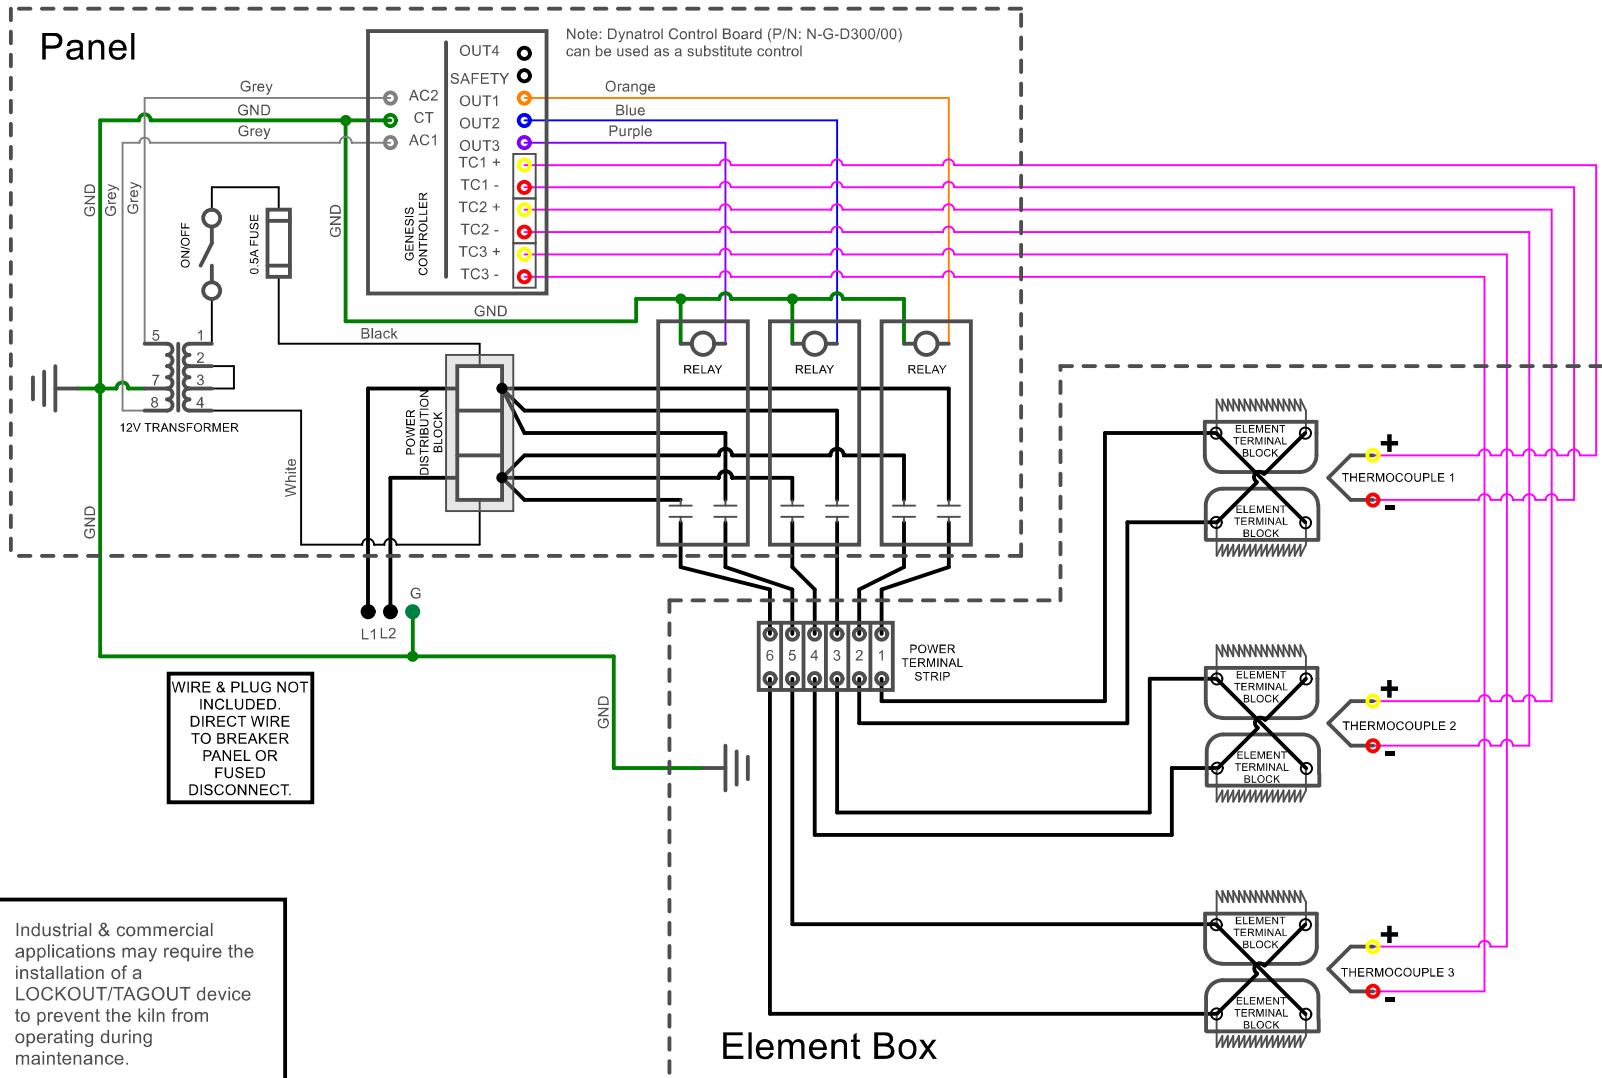

WIRE & PLUG NOT INCLUDED. DIRECT WIRE TO BREAKER PANEL OR FUSED DISCONNECT.

Industrial & commercial applications may require the installation of a LOCKOUT/TAGOUT device to prevent the kiln from operating during maintenance.

This kiln is recommended to be wired & connected to an approved U. L. & NEC configured receptacle controlled with a disconnect switch and properly fused according to the kW load specification listed on the kiln nameplate. L&L Kiln Mfg., Inc., also recommends fuses rather than circuit breakers to prevent nuisance tripping.

Wiring Information			
Power	10AWG / 150°C / 600V		
Control	16-22AWG / 105°C / 600V		
Power Supply Wire Gauge assumes 75°C Copper Wire. See hotkilns.com/wire-size.			
Model: e23T-220			
Voltage	220 / 1 / 50-60		
Watts	10,560		
Full Load Amps	L1	L2	L3
	48.0	48.0	
Power Supply	Fuse	Wire	
	60A	6AWG	
Standard Elements: E-E-23TL/41			
Quad Elements: E-E-23TU/41			
Quantity: 6	Ohms: 26.5		

E23T Easy-Fire 1 Phase 220V 220V			
			505 Sharptown Road Swedesboro NJ 08085 service@hotkilns.com (856)-294-0077
			Drawn by: JS
Rev.	Date	Description	C0023