
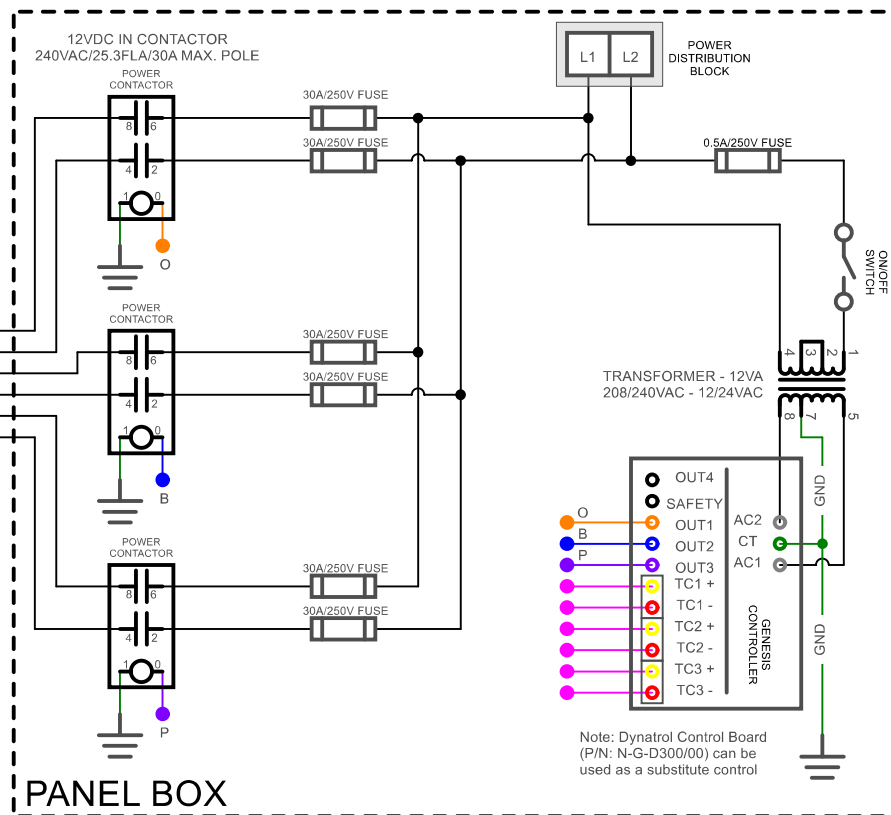


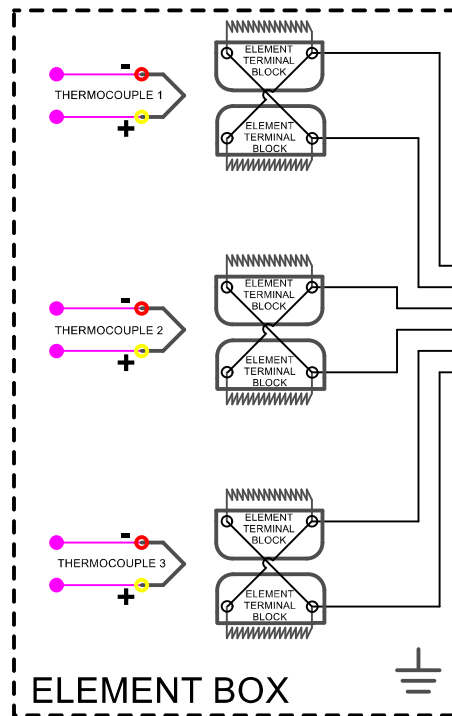

WIRE & PLUG NOT INCLUDED.
DIRECT WIRE TO BREAKER
PANEL OR
FUSED
DISCONNECT.

ELEMENT BOX

PANEL BOX

Wiring Information

Power: 10AWG / 150°C / 600V
Control: 16-22AWG / 105°C / 600V
Power Supply Wire Gauge assumes 75°C Copper Wire. See hotkilns.com/wire-size.

Model: eQ2327-208

Voltage	208 / 1 / 50-60		
Watts	11,648		
Full Load Amps	L1	L2	L3
	56.0	56.0	
Power Supply	Fuse	Wire	
	70A	4AWG	
Elements	QTY	OHMS	
E-Q-2327/20	6	21.5	

Model: eQ2327-220

Voltage	220 / 1 / 50-60		
Watts	12,321		
Full Load Amps	L1	L2	L3
	56.0	56.0	
Power Supply	Fuse	Wire	
	70A	4AWG	
Elements	QTY	OHMS	
E-Q-2327/40	6	22.7	

Model: eQ2327-240

Voltage	240 / 1 / 50-60		
Watts	13,440		
Full Load Amps	L1	L2	L3
	56.0	56.0	
Power Supply	Fuse	Wire	
	70A	4AWG	
Elements	QTY	OHMS	
E-Q-2327/30	6	24.8	

Industrial & commercial applications may require the installation of a LOCKOUT/TAGOUT device to prevent the kiln from operating during maintenance.

This kiln is recommended to be wired & connected to an approved U. L. & NEC configured receptacle controlled with a disconnect switch and properly fused according to the kW load specification listed on the kiln nameplate. L&L Kiln Mfg., Inc., also recommends fuses rather than circuit breakers to prevent nuisance tripping.

eQ2327 1 Phase 208V - 240V (C0086)



505 Sharptown Road
Swedesboro NJ 08085
service@hotkilns.com
(856)-294-0077

A	06/15/2026		AF	DL	Drawn by: AF
Rev.	Date	Description	Approved by	Dwg. No.	C0086