
- WALL/KILN SPACING: 12" [30.5cm] SPACING BETWEEN SIDES OF KILN AND WALLS OR OTHER OBJECTS. 18" [45.7cm] IS RECOMMENDED. LEAVE AT LEAST 18" [45.7cm] BETWEEN TWO KILNS.
- AMBIENT VENTILATION: SEE CHART BELOW FOR RATINGS. TO CALCULATE
- REQUIREMENTS, SEE hotkilns.com/calculate-kiln-room-ventilation.

 KILN VENTILATION: L&L VENT-SURE KILN VENT RECOMMENDED FOR SAFETY

 AND LONGER ELEMENT LIFE. OPTIONAL CONTROL ALLOWS VENT TO BE TURNED ON AND OFF WITH CONTROL.
- **OTHER INFO: REFER TO INSTALLATION** INSTRUCTIONS AND CAUTIONS INSTRUCTIONS FOR OTHER REQUIREMENTS AND SAFETY INFORMATION. REFER TO WIRING DIAGRAM FOR ELECTRICAL HOOKUP INFORMATION.
- MAX LOAD WEIGHT: SEE hotkilns.com/load-weight
- WEIGHT OF KILN: 1485 LBS, 674 KG

CLEARANCES, LAYOUT & INSTALLATION

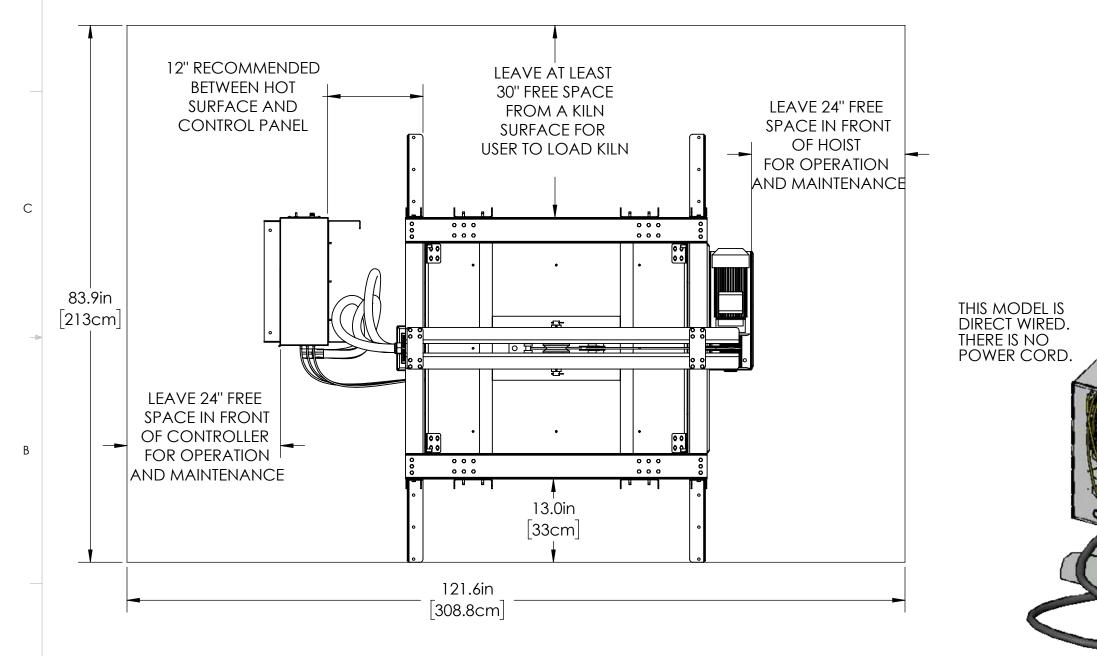

С VENT TUBE OUTLET (OPTIONAL - PART OF VENT-SURE DOWNDRAFT VENT SYSTEM) 505 SHARPTOWN RD REV SHEET OF DRAWING NO.

BTUS/ KILOJOULES PER HOUR NEEDED TO BE VENTED WITH AMBIENT ROOM VENTILATION (THIS IS IN ADDITION TO KILN VENTING):

AT TEMP F	BTUS	AT TEMP C	KILOJOULES
1800F	20457	980C	21583
2000F	24169	1095C	25500
2232F	28877	1222C	30467
2350F	31439	1285C	33170

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF L&L KILN MFG INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF L&L KILN MFG INC. IS PROHIBITED. MADE FROM NEW

DRAWN BY DATE DSL 05/01/20 1:15

X3227-BL (3" BRICK) DAVINCI BELL-LIFT GENERAL DIMENSIONS

PH: (856) 294-0077 FAX: (856) 294-0070

1/4 | 300-001-43

6

5

SCALE

